



# ex-star TENT

## SET UP

NOTE: THIS PRODUCT REQUIRES TWO PEOPLE TO SET UP.



1 Remove the pole set, pegs, foot plate and end cap from the bag.



2 Spread the canopy out on a flat surface with the graphics facing upwards.



3 Join the 3 poles together. Attach the end cap to the top of the tapered section. Attach the foot plate to the end of the widest pole. Ensure the flat, square foot plate is at the bottom and the rounded end cap is at the top. Line up the drill holes and place the split pin so that the foot is attached to the base pole.



4 Push the end cap on the pole from underneath, onto the Velcro strips in the centre of the fabric. Force the pole upwards toward the centre. Ensure that the pole is as close as possible to vertical and lower the base plate.



5 Hook each ground peg into each rope loop. Push each peg into the ground (no more than 14 paces apart).



6 To ensure the canopy is taut, adjust and tighten each leg by using the adjuster on each leg, located near the peg.

## TAKE DOWN



1 Release the tension on the cords on each leg. Remove the pole from underneath the middle of the canopy to collapse the tent.



2 Separate the 3 poles and remove the end cap and the foot plate from each end. Place them in the bag in the separate pockets.



3 Loosen the rope loop from each of the pegs and pack the pegs away in the pocket of the bag.



4 Spread the canopy out, grab the middle of the roof tip and pull to one side to bring all the legs together. Fold end to end.



5 Pack away in the bag.



**Expand-a-Brand**  
Branding your events